



BUILT-IN COMBINATION OVEN WITH MICROWAVE INSTRUCTION MANUAL

MODEL: MW-944R

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

CONTENTS

CONTENTS	2
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	3
ADDENDUM	3
SPECIFICATIONS	3
IMPORTANT SAFETY INSTRUCTION	4-5
TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION	6-8
IMPORTANT SAFETY INSTRUCTIONS	6-8
SETTING UP YOUR OVEN	8-9
IMPORTANT INFORMATION ABOUT INSTALLING	9
PLACEMENT	10
INSTALLATION DIMENSIONS	10
BUILDING IN	11
INSTALL THE GRILL PAN	12
OPERATION INSTRUCTION	13-24
TROUBLESHOOTING	25

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	MW-944R
Rated Voltage:	220V~50Hz
Rated Input Power(Microwave):	1600W
Rated Output Power(Microwave):	900W
Rated Input Power(Grill):	1700W
Rated Input Power(Convection):	1650W
Rated Input Power(MAX):	3200W
Oven Capacity:	44L
Turntable Diameter:	∅ 360mm
External Dimensions:	595 X 454 X 568 mm
Net Weight:	Approx. 41.0 kg


IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Warning : Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. Warning : It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
Children shall not play with the appliance.
Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. Only use utensils suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surface, and do not cover any vents on the oven.
20. Do not let cord hang over edge of table or counter.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

- 23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- 24. Children should be supervised to ensure that they do not play with the appliance.
- 25. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- 26. Accessible parts may become hot during use. Young children should be kept away.
- 27. Steam cleaner is not to be used.
- 28. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- 29. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- 30. **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- 31. Surface of a storage cabinet can get hot.
- 32. ☐ The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- 33. The microwave oven is intended to be used in a cabinet.
- 34. ☐ The microwave oven must be operated with any cabinet door open.

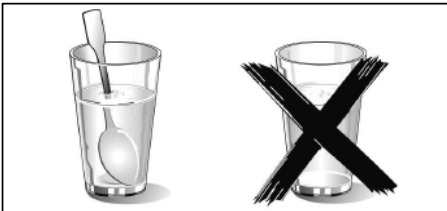

- If you are heating liquid in the microwave, then you must also place a teaspoon in the container. This will ensure that the liquid does not boil suddenly after being removed from the microwave cavity.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

To Reduce the Risk of Injury to Persons Grounding Installation

DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death.

Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:

⌘ The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.

à The extension cord must be a grounding-type 3-wire cord.

& The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip—For easier cleaning of the cavity walls that the food cooked can touch:
Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes.
Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil T test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven


Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

SETTING UP YOUR OVEN


Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and oven cavity
Your oven comes with the following accessories:


- Enamel Tray 1
- Turntable ring assembly 1
- Instruction Manual 1

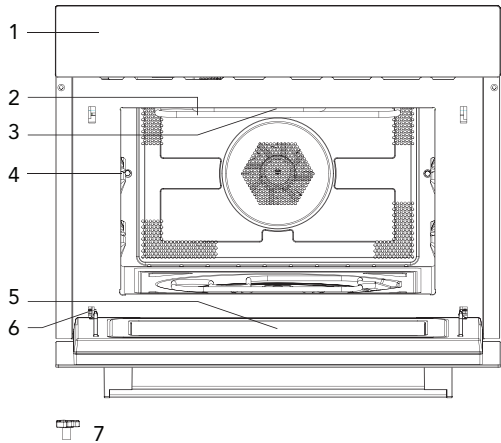


- 1. Control panel
- 2. Grill element
- 3. Light
- 4. Level
- 5. Door glass
- 6. Hinge
- 7. Turntable shaft

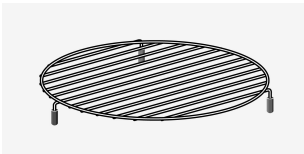


8

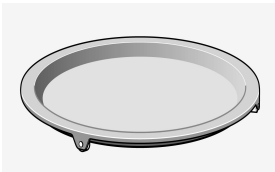

9

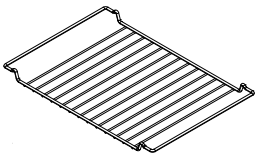


10

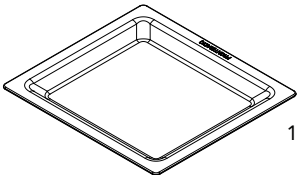

11

- 8. Short Grill Rack
- 9. Grill Pan
- 10. Square Grill Rack
- 11. Square Glass Pan

Turntable Installation

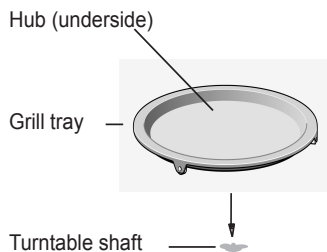

- Never place the enamel tray upside down. The enamel tray should never be restricted.
- The enamel tray must always be used during cooking.
- All food and containers of food are always placed on the enamel tray for cooking.
- If enamel tray cracks or breaks, contact your nearest authorized service center.

IMPORTANT INFORMATION ABOUT INSTALLING

- This appliance is NOT intended for use in a commercial environment.
- Please observe the installation instructions provided and note that this appliance should only be installed by a qualified technician.
- The appliance is fitted with a plug and must only be connected to a properly installed earthed socket.
- In case a new socket is needed, installation and cable connection must only be done by a qualified electrician. If the plug is no longer accessible following installation, a pole disconnecting device must be present on the installation site with a contact gap of at least 3 mm.
- Adapters, multiway strips and extension cords must not be used. Overloading can result in fire.
- If the appliance is not fitted with a supply cord and a plug, the connection equipment must have a contact separation in all poles that provide full disconnection, and the appliance must be incorporated in the fixed wiring in accordance with the wiring rules.

The accessible surface may be hot during operation.







Placement

- **Danger!** Do not disassemble this appliance. Touching internal components of this appliance can cause serious personal injury or death.
- Place the microwave oven on a firm, flat surface.
- Make sure that there is sufficient ventilation around the microwave oven. At the rear and sides keep at least 10 cm free.
- Do not cover the air vents.
- The adjustable feet should not be removed.
- Do not place the microwave oven near a heat source.
- Transmitting and receiving equipment such as radios and televisions can affect the operation of the microwave oven.

Installation dimensions

Ventilation openings


behind, min. 250 cm²

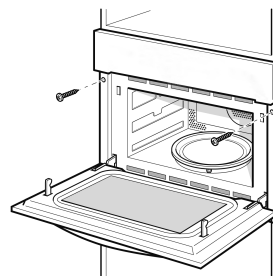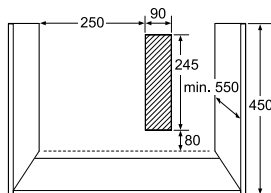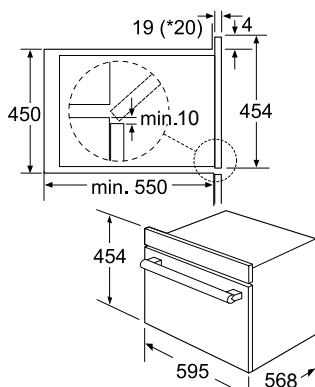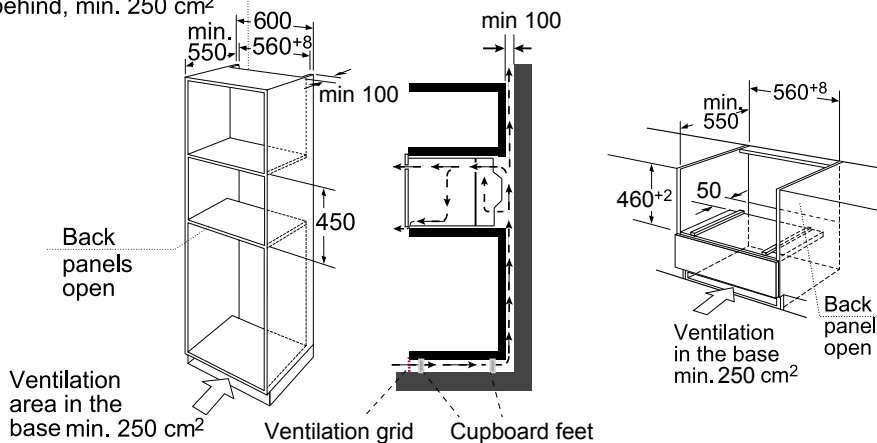

* 20 mm for metal fascias

Building in


- Do not hold or carry the appliance by the door handle. The door handle cannot hold the weight of the appliance and may break off.
1. Carefully push the microwave into the box, making sure that it is in the centre.
 2. Open the door and fasten the { 34[, 35^4 5^ } with the screws that were supplied.

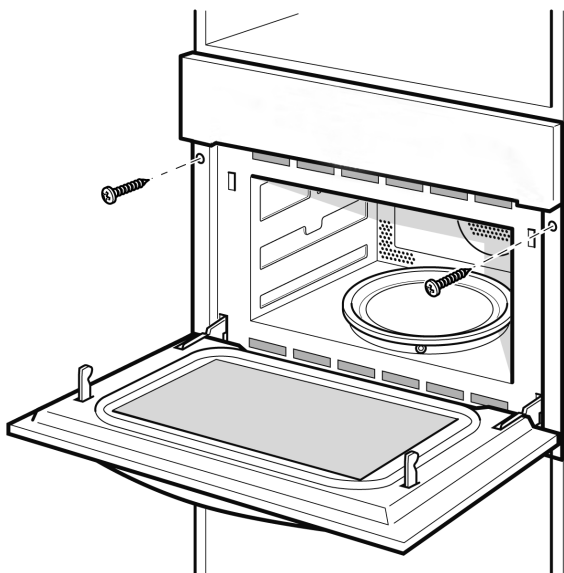


- Fully insert the appliance and centre it.
- Do not kink the connecting cable.
- Screw the appliance into place.
- The gap between the worktop and the appliance must not be closed by additional battens.

INSTALL THE GRILL PAN

1. Be sure the angle of the shaft.

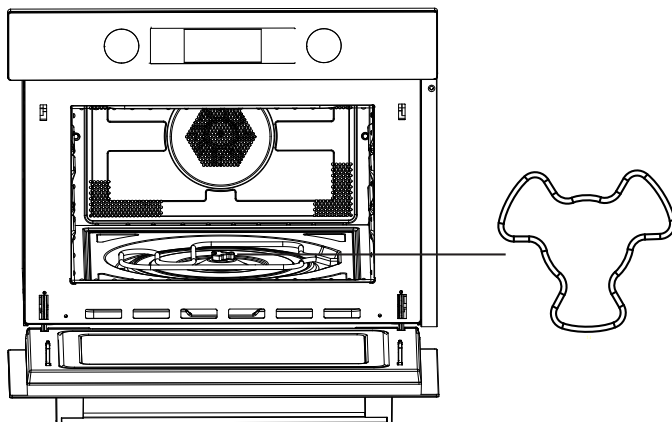


2. Adjust the angel of the grill pan and the shaft.

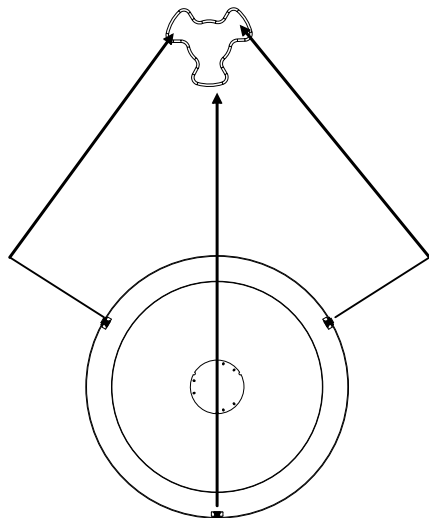

3. Put the pan into the cavity and adjust slightly.

OPERATION INSTRUCTION

Control Panel and Features

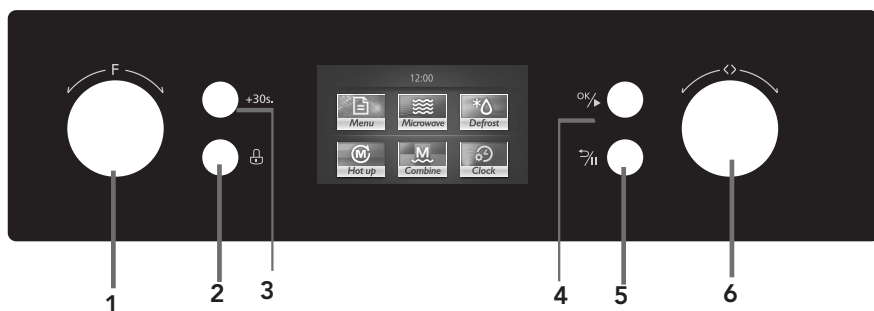




- 1) Function knob
- 2) Lock/Unlock button
- 3) +30 sec. button
- 4) Start/OK Button
- 5) Return/Pause/Stop button
- 6) Selection knob

This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs better for cooking.

 1.Clock Setting



When the microwave oven is electrified, "0:00" will blink, buzzer will ring once.



- a) Turn  knob to "CLOCK", then press "OK/▶" to activate the clock-setting function. The hour figures will flash.
- b) Turn " " to adjust the hour figures, the input time should be within 0--23.
- c) Press "OK/▶", the minute figures will flash.
- d) Turn " " to adjust the minute figures, the input time should be within 0--59.
- e) Press "OK/▶" to finish clock setting. Then return to main interface, the clock ticking.




2. Microwave Cooking

- a) Turn  knob to "MICROWAVE", then press "OK/▶" to activate the microwave function. "1:00" is blinking in the display, the default power is 900W.
- b) Turn  knob to select the microwave power (between 100W to 900W).

At this point, the cooking time is grayed out.



- c) Press "OK/▶" to confirm the microwave power, then enter the Cook time settings interface, cooking time flashes (default is 01:00), in which case the cooking time display for the White .
- d) Turn  knob to set the cooking time(0:05-90:00).

The max. cooking time depends on the power that has been set. When the power is 900W, the MAX. time is 30 minutes and other powers are 90 minutes.



- e) Press "OK/▶" button to start cooking.

NOTE: the step quantities for the adjustment time of the coding switch are as follow:






 
- 0---1 min : 5 second
- 1---5 min : 10 seconds
- 5---15 min : 30 seconds
- 15---60 min : 1 minute
- 60 min : 5 minutes

Microwave Power Chart


 
 
 
 
 
Microwave Power	100%	80%	50%	30%	20%
Display	900W	700W	450W	300W	100W


3. Defrost

There are 2 defrosting programs. You only have to choose the program and set the weight ,and time are already set.

- a) Turn  knob to "DEFROST",then press "  "to activave the defrost function.
"D01","D02"will display.
- b) Turn  knob to select the defrost mode.
- c) Press "  " to confirm,when defrost menu selected, turn  knob to select weight.
- d) Press "  " button to start cooking.






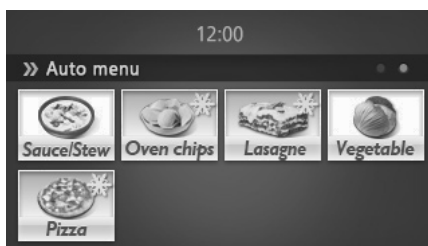
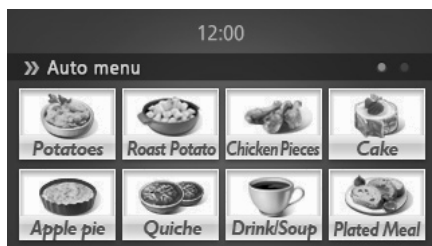
Program	Category	Item
D01 (defrost)	Meat, poultry and fish	If you hear a beep, the combi microwave oven stops. Turn the food and press  button to continue the     
D02 (defrost)	Bread, cake and fruit	




Note:The oven will sounds 3 times, and this is normal. In order to have a better effect of defrosting food, you should turn the food over, close the door, and then press "  " to continue cooking. If no operation,the oven will pause.

4.Auto Cook

There are 13 automatic cooking programs. You only have to choose the program and set the weight. The power, the time and the temperature are already set.

- Turn  knob to " MENU" ,then press "  "to activave the Auto-cook function.
- Turn  knob to select auto menu.Potatoes,Roast potato,Chicken pieces,Cake, Apple pie,Quiche,Drink/Soup,Plate meal,Sauce/Stew,Oven chips,Lasagne, Vegetable,Pizza will be displayed.





- Press "  " to confirm,when auto menu selected, turn  knob to select weight.
- Press "  " button to start cooking.

**	Vegetables	Fresh vegetables
**	Side dishes	Potatoes - peeled/cooked
*	Side dishes	Potatoes - roasted If you hear a beep, turn the food. The combi micr owave oven starts the next fase automatically.
	Poultry/Fish	Chicken pieces If you hear a beep, turn the food. The combi micr owave oven starts the next fase automatically.
*	Bakery	Cake
*	Bakery	Apple pie
*	Bakery	Quiche
**	Reheat	Drink/soup
**	Reheat	Plated meal
**	Reheat	Sauce/stew/dish
*	Convenience	Frozen - pizza
*	Convenience	Oven chips If you hear a beep, tur n the food. The combi micr owave oven starts the next fase automatically.
*	Convenience	Frozen - lasagne



 
- The programmes with a * are preheated. During preheating, the cooking time pauses and the preheating symbol is on. After preheating, you wil hear an alarm and the preheating symbol will blink.
- The programmes with ** only use the microwave function.

HOT UP FUNCTION

- 1) Turn  knob to "HOT UP", then press "OK/▶" to activate the "HOT UP" function.
"GRILL", "CONVECTION", "GRILL FAN", "BOTTOM CONV." will display.
- 2) Turn  knob to select the cooking mode, then press "OK/▶" button to confirm.






A. Grill Cooking


- 1) Turn  knob to "HOT UP", then press "OK/▶" to activate the "HOT UP" function.
"GRILL", "CONVECTION", "GRILL FAN", "BOTTOM CONV." will display.
- 2) Turn  knob to select the grill mode, then press "OK/▶" button to confirm.
The default grill power is the third level. level3(the MAX), level2 or level1(the MIN).
- 3) Turn  to select the grill level, At this point, the cooking time is grayed out.
- 4) Press "OK/▶" to confirm the grill level, then enter the Cook time settings interface, cooking time flashes (default is 10:00), in which case the cooking time display for the White, the max cooking time is 90 minutes.
- 5) Press "OK/▶" button to start cooking.




B. Convection Cooking

- 1) Turn  knob to "HOT UP", then press "OK/▶" to activate the "HOT UP" function.
"GRILL", "CONVECTION", "GRILL FAN", "BOTTOM CONV." will display.
- 2) Turn  knob to select the convection mode, then press "OK/▶" button to confirm.
The default temperature is 180 degrees. The temperature is from 50 to 230 degrees.

- 3) Turn  to select the temperature, At this point, the cooking time is grayed out.
- 4) Press "OK/▶" to confirm the temperature, then enter the cook time setting interface, cooking time flashes (default is 10:00), in which case the cooking time display for the White, the max cooking time is 5 hours.
- 5) Press "OK/▶" button to confirm the cooking time, then go to the preheat setting selection interface

Note: If you need to warm up, then rotate  and keep the cursor in the "Preheat" position; Do not need preheating, then put at "No Preheat." (default is "No Preheat") .when the setting temperature is 50 degrees, without this step, press directly for cooking.

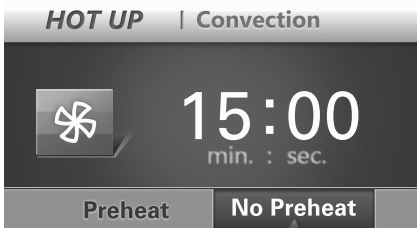



- 6) Press "OK/▶" button to start cooking.


Note: a. Without preheating: The screen shows the remaining cooking time.


b. Preheating mode: Screen appears "While preheating, Please make sure Empty inside" ,and then enter the preheat status display interface, progress bar shows preheating process has reached the set temperature, the screen displays a prompt statement "It is Starting now, please put the FOOD INSIDE".

Then place the food in, press OK/▶ to begin cook. The display shows the remaining time.

C. Grill Fan Cooking

- 1) Turn  knob to "HOT UP" ,then press "OK/▶" "to activate the "HOT UP" function. "GRILL", "CONVECTION", "GRILL FAN", "BOTTOM CONV." will display.
- 2) Turn  knob to select the grill fan mode, then press "OK/▶" button to confirm. The default temperature is 180 degrees. The temperature is from 100 to 230 degrees.


- 3) Turn  to select the temperature, At this point, the cooking time is grayed out.
- 4) Press "OK/▶" to confirm the temperature, then enter the cook time setting interface, cooking time flashes (default is 10:00), in which case the cooking time display for the White, the max cooking time is 5 hours.
- 5) Press "OK/▶" button to confirm the cooking time, then go to the preheat setting selection interface.

Note: If you need to warm up, then rotate  and keep the cursor in the "Preheat" position; Do not need preheating, then put at "No Preheat." (default is "No Preheat") .when the setting temperature is 50 degrees, without this step, press directly for cooking.




- 6) Press "OK/▶" button to start cooking.


Note: a. Without preheating: The screen shows the remaining cooking time.

b. Preheating mode: Screen appears "While preheating, Please make sure Empty inside" ,and then enter the preheat status display interface, progress bar shows preheating process has reached the set temperature, the screen displays a prompt statement "It is Starting now, please put the FOOD INSIDE".

Then place the food in, press  to begin cook. The display shows the remaining time.

D. Bottom Convection Cooking


- 1) Turn  knob to "HOT UP" ,then press "OK/▶" to activate the "HOT UP" function. "GRILL", "CONVECTION", "GRILL FAN", "BOTTOM CONV." will display.
- 2) Turn  knob to select the bottom conv. mode, then press "OK/▶" button to confirm. The default temperature is 180 degrees. The temperature is from 100 to 230 degrees.
- 3) Turn  to select the temperature, At this point, the cooking time is grayed out.
- 4) Press "OK/▶" to confirm the temperature, then enter the cook time setting interface, cooking time flashes (default is 10:00), in which case the cooking time display for the White, the max cooking time is 5 hours.
- 5) Press "OK/▶" button to confirm the cooking time, then go to the preheat setting selection interface.

Note: If you need to warm up, then rotate  and keep the cursor in the "Preheat" position;
Do not need preheating, then put at "No Preheat." (default is "No Preheat") .when the setting temperature is 50 degrees, without this step, press directly for cooking.


 
6) Press "  " button to start cooking.


 
Note: a. Without preheating: The screen shows the remaining cooking time.

b. Preheating mode: Screen appears "While preheating, Please make sure Empty inside" ,and then enter the preheat status display interface, progress bar shows preheating process has reached the set temperature, the screen displays a prompt statement "It is Starting now,please put the FOOD INSIDE".

Then place the food in, press  to begin cook. The display shows the remaining time.


 
COMBIN FUNCTION

1) Turn  knob to " COMBIN " ,then press "  " to activave the "combin" function.
"MW GRILL","MW CONV.", "MW GRILL FAN","MW BOTTOM CONV."will display.


2) Turn  knob to select the cooking mode,then press "  " button to confirm.



A.MW Grill Cooking

1) Turn  knob to " COMBIN " ,then press "  " to activave the "combin" function.
"MW GRILL","MW CONV.", "MW GRILL FAN","MW BOTTOM CONV."will display.

2) Turn  knob to select the MW Grill mode,then press "  " button to confirm.


3) Turn  knob to select the grill mode, then press "OK/▶" button to confirm.

The default grill power is the third level. level3(the MAX), level2 or level1(the MIN).

4) Turn  knob to select the microwave power (100W,300W,450W,700W)


default power is 300W. At this point, the cooking time is grayed out.

5) Press "OK/▶" to confirm the microwave power, then enter the Cook time settings interface, cooking time flashes (default is 10:00), in which case the cooking time display for the white.


6) Turn  knob to set the cooking time(0:05-90:00).


7) Press "OK/▶" button to start cooking.

B.MW Convection Cooking


1) Turn  knob to "COMBIN", then press "OK/▶" to activate the "combin" function.

"MW GRILL", "MW CONV.", "MW GRILL FAN", "MW BOTTOM CONV." will display.


2) Turn  knob to select the MW Conv. mode, then press "OK/▶" button to confirm.

3) Turn  knob to select the convection mode, then press "OK/▶" button to confirm.

The default temperature is 180 degrees. The temperature is from 50 to 230 degrees.


4) Turn  to select the temperature, At this point, the cooking time is grayed out.

5) Press "OK/▶" to confirm the temperature, then enter the power setting interface,

 
6) Turn  knob to select the microwave power (100W,300W,450W,700W)

default power is 300W. At this point, the cooking time is grayed out.

7) Press "OK/▶" to confirm the microwave power, then enter the Cook time settings interface, cooking time flashes (default is 10:00), in which case the cooking time display for the white.

Turn  knob to set the cooking time(0:05-90:00).


8) Press "OK/▶" button to confirm the cooking time, then go to the preheat setting selection interface.

Note: If you need to warm up, then rotate  and keep the cursor in the "Preheat" position;
Do not need preheating, then put at "No Preheat." (default is "No Preheat") .when the setting temperature is 50 degrees, without this step, press directly for cooking.



9) Press "  " button to start cooking.

Note: a. Without preheating: The screen shows the remaining cooking time.


b. Preheating mode: Screen appears "While preheating, Please make sure Empty inside", and then enter the preheat status display interface, progress bar shows preheating process has reached the set temperature, the screen displays a prompt statement "It is Starting now, please put the FOOD INSIDE".


 
Then place the food in, press  to begin cook. The display shows the remaining time.

C.MW Grill Fan Cooking


1) Turn  knob to "COMBIN", then press "  " to activate the "combin" function.

"MW GRILL", "MW CONV.", "MW GRILL FAN", "MW BOTTOM CONV." will display.


2) Turn  knob to select the MW Grill Fan mode, then press "  " button to confirm.

3) Turn  knob to select the grill fan mode, then press "  " button to confirm.


The default temperature is 180 degrees. The temperature is from 100 to 230 degrees.


4) Turn  to select the temperature, At this point, the cooking time is grayed out.


5) Press "  " to confirm the temperature, then enter the power setting interface,


6) Turn  knob to select the microwave power (100W, 300W, 450W, 700W)

default power is 300W. At this point, the cooking time is grayed out.

7) Press "  " to confirm the microwave power, then enter the Cook time settings interface, cooking time flashes (default is 10:00), in which case the cooking time display for the white.

Turn  knob to set the cooking time (0:05-90:00).

8) Press "  " button to confirm the cooking time, then go to the preheat setting selection interface.

Note: If you need to warm up, then rotate  and keep the cursor in the "Preheat" position; Do not need preheating, then put at "No Preheat." (default is "No Preheat"). when the setting temperature is 50 degrees, without this step, press directly for cooking.

 
9) Press "OK/▶" button to start cooking.


Note: a. Without preheating: The screen shows the remaining cooking time.


b. Preheating mode: Screen appears "While preheating, Please make sure Empty inside", and then enter the preheat status display interface, progress bar shows preheating process has reached the set temperature, the screen displays a prompt statement "It is Starting now, please put the FOOD INSIDE".

Then place the food in, press OK/▶ to begin cook. The display shows the remaining time.


D.MW BottomConvection Cooking

1) Turn  knob to "COMBIN", then press "OK/▶" to activate the "combin" function. "MW GRILL", "MW CONV.", "MW GRILL FAN", "MW BOTTOM CONV." will display.


2) Turn  knob to select the MW BOTTOM Conv. mode, then press "OK/▶" button to confirm.

3) Turn  knob to select the MW Bottom Conv. mode, then press "OK/▶" button to confirm.


The default temperature is 180 degrees. The temperature is from 100 to 230 degrees.

4) Turn  to select the temperature. At this point, the cooking time is grayed out.


5) Press "OK/▶" to confirm the temperature, then enter the power setting interface.

6) Turn  knob to select the microwave power (100W, 300W, 450W, 700W) default power is 300W. At this point, the cooking time is grayed out.

7) Press "OK/▶" to confirm the microwave power, then enter the Cook time settings interface, cooking time flashes (default is 10:00), in which case the cooking time display for the white.

Turn  knob to set the cooking time (0:05-90:00).


8) Press "OK/▶" button to confirm the cooking time, then go to the preheat setting selection interface.

Note: If you need to warm up, then rotate  and keep the cursor in the "Preheat" position; Do not need preheating, then put at "No Preheat." (default is "No Preheat"). when the setting temperature is 50 degrees, without this step, press directly for cooking.


9) Press "  " button to start cooking.

Note: a. Without preheating: The screen shows the remaining cooking time.

- b. Preheating mode: Screen appears "While preheating, Please make sure Empty inside" ,and then enter the preheat status display interface, progress bar shows preheating process has reached the set temperature, the screen displays a prompt statement "It is Starting now,please put the FOOD INSIDE".

Then place the food in, press  to begin cook. The display shows the remaining time.

LOCK-OUT FUNCTION FOR CHILDREN

Lock: In waiting state, press "  " for 3 seconds, there will be a long "beep" denoting entering into the children-lock state .

Unlock : In locked state, press "  " for 3 seconds, there will be a long "beep" denoting that the lock is released.

+30 SEC. FUNCTION

- 1) In standby mode, press " +30s." key to cook with 900W microwave power for 30 seconds.
- 2) During the microwave, grill and combination cooking process, press "+30s." to increase the cooking time. Each press on the same key can increase 30 seconds. Maximum time can not exceed the time limit.

Note: Under the states of auto menu and defrost, cooking time cannot be increased by pressing " +30s.".

TROUBLE SHOOTING

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.